

MTP Series LinkImage

Operating Instruction V1.0


1. Function Introduction

Fiber micrographs (LinkImage) display the event on the fiber by images. When open the Pass/Fail function, it can mark the event pass or fail. This function can supply the professional test results, analysis the results, issue the professional report, and offer the detail solutions for the problems. It is convenient for the non- professional tester.

2. Operating Instruction


2.1 Open the LinkImage Function

At the **OTDR Setup** interface, choose [**LinkView Mode**], and then press **OK**. As shown in the following figure:

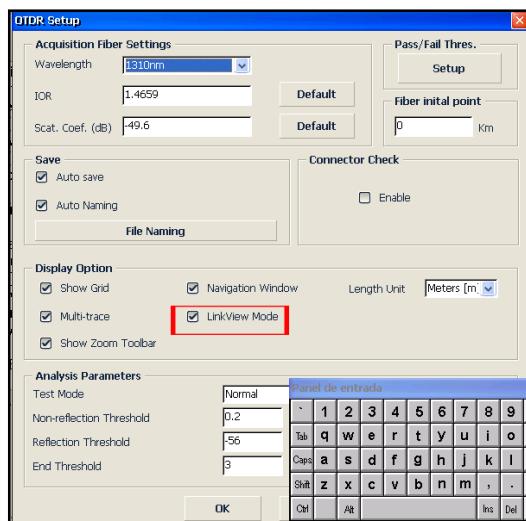

2.2 Interface Instruction

After opened the [**LinkView Mode**], whenever users open the trace files or after test, the trace is displayed as the following figure:

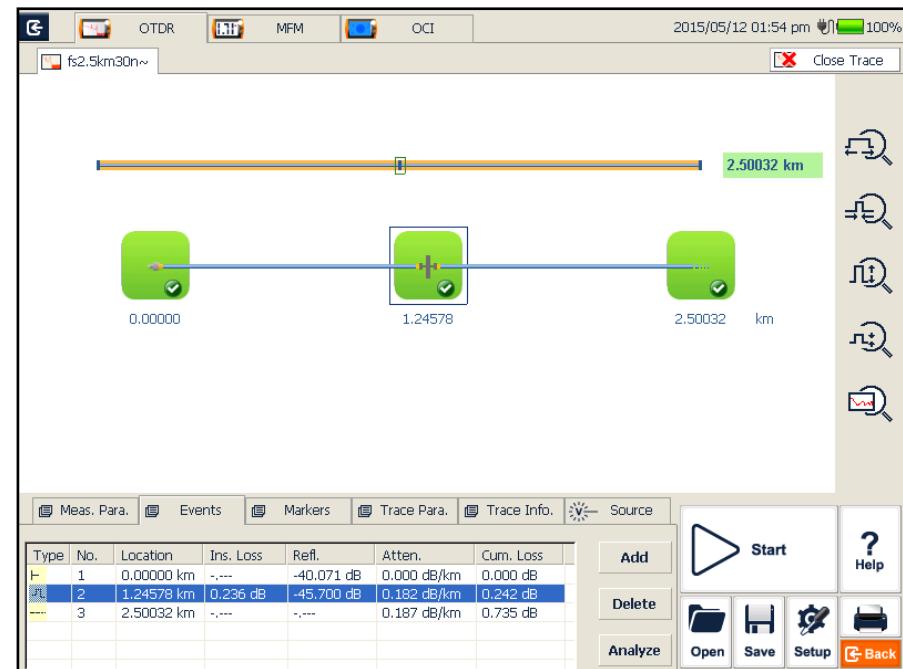

The top of interface is the fiber general information, and you can see the fiber overview, including the location of all events.

The bottom of interface is the event: different types of icons represent different types of events respectively; the current event there is a selection box is selected. Each event icon will have a small pass/pass icon in the lower right.

NOTE: *LinkImage is the customization function for the MTP new version software, and it must be customized during the production processes.*

MTP 系列“纤镜图”使用说明 V1.0

1、功能介绍

纤镜图 (LinkImage)，是以图片的形式显示光纤上的各个事件；在 Pass/Fail 功能开启的状态下，能够标示出该事件是否合格。本功能可用于给非专业测试人员在测试过程中，提供专业的测试结果，出具专业的报告，和分析结果，并对出现的问题提供详尽的解决方案。

2、操作说明


2.1、开启 LinkImage 功能

在 OTDR 的设置界面下，选择“纤镜图模式”，点击“应用”即可。如下图：



2.2、界面介绍

开启“纤镜图模式”之后，打开迹线文件和测量结束后，显示迹线的方式如下图所示：

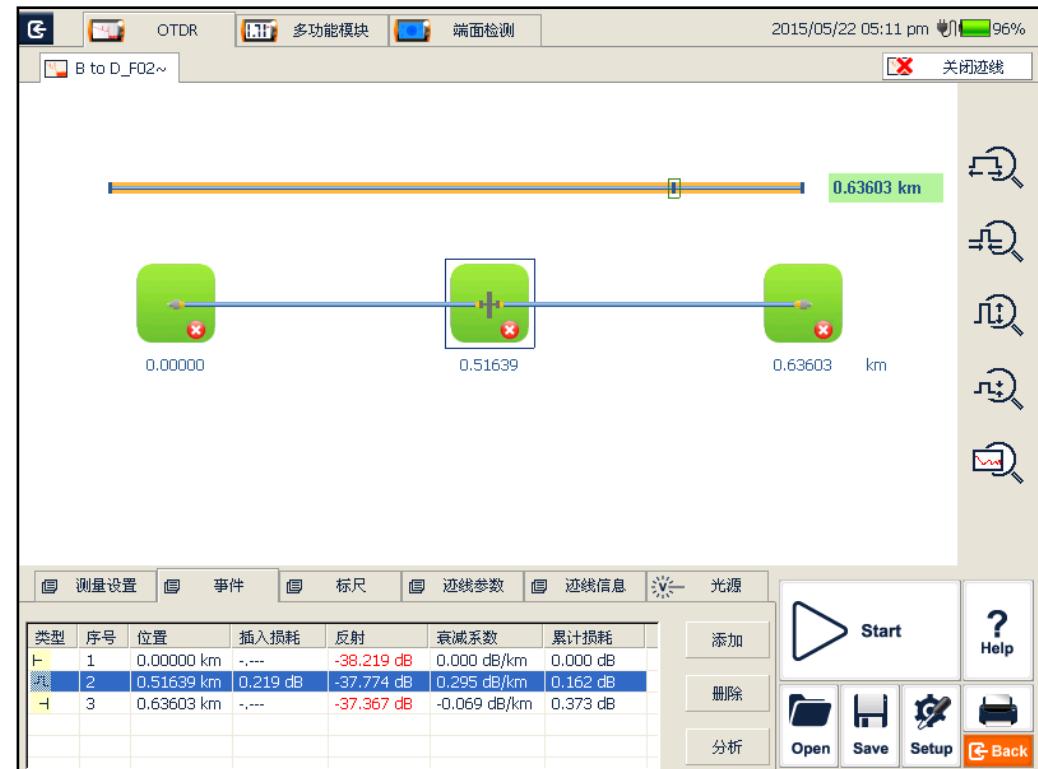

视图上边是光纤总体信息，可以看到光纤的概览，包括所有事件的位置

视图下边是事件的显示：不同类型的图标分别表示不同事件类型，当前选中的事件会有一个选择框。每个事件图标的右下会有一个小的 pass/fail 的图标。

注：MTP 新版本软件，LinkImage 是定制功能，必须在生产环节定制才能使用。